


## Adjustments

If necessary the adjustments detailed below can be made.  
For correct adjustment we recommend :

- insert the glass first
- Fix the folding elements in the building

**Important:**  
**Screws made tamper proof with bearings cannot be loosened later!**

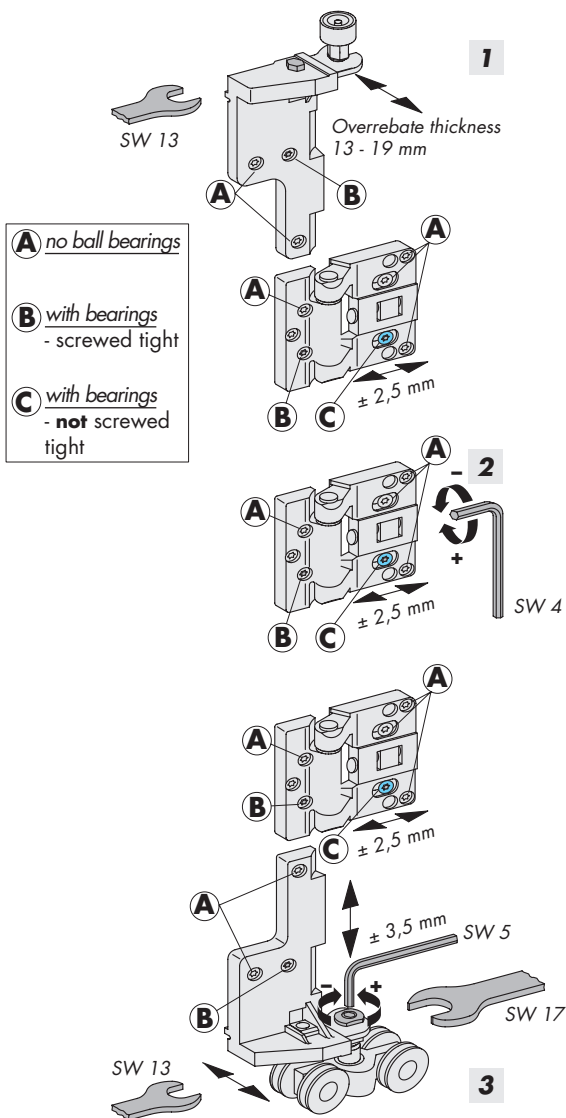

### Sash closing pressure via btm hinge

- Release the clamping screw SW13 on the hinge.
- Adjust sash pressure.
- Adjust sash pressure.

### Airgap adjustment via sash hinge

*please note* Loosen sash hinges one after the other, adjust and re tighten.

- Release fixing screws, without bearings. Unscrew the two external screws, without bearings.
- Using an allen key SW 4 adjust the horizontal airgap of the sash as required.
- Re tighten screws. Re tighten both external fixing screws.

### Height adjustment using bogie wheel

- Lightly release the clamp nut SW 17 on the wheel.
- Adjust sash height with SW 5 allen key . meanwhile holding the lock nut with a spanner SW17.
- Retighten the lock nut SW 17, whilst preventing the bolt from rotating with the allen key SW 5.

### Adjustment of FAVORIT-hardware

- sash pressure using the eccentric cams

see maintenance instruction H49.WA-FS0001gb.